
Operating manual

M040-1Z000200400

Valid for: PRE-PT-D30

Valid from:

- **Firmware version: 1.0.0**
- **Server version: ---**
- **Hardware version: ---**



Additional information

This operating manual is an abridged version. The information contained herein applies to all devices based on the hardware platform "M040-1Z000200400 ". The complete documentation for the individual devices can be accessed via the following QR codes or links:

PRE-PT-D30:



<https://support.microtronics.com/PRE-PT-D30/manual>

Chapter 1 Table of contents

Cover	1
Additional information	3
Chapter 1 Table of contents	5
Chapter 2 Declaration of conformity	7
Chapter 3 Specifications	9
Chapter 4 General specifications	11
4.1 Translation	11
4.2 Copyright	11
4.3 General descriptive names	11
4.4 Safety instructions	12
4.4.1 Use of the hazard warnings	12
4.4.2 Safety symbols on the device	12
4.4.3 General safety instructions	13
4.4.4 Specific safety instructions	13
4.4.5 Safety and preventative measures for handling devices with wireless modules	13
4.4.5.1 Safety and precautionary measures for devices with wireless module	14
4.5 Overview	14
4.5.1 Block diagram	15
4.6 Limitations of use	15
4.6.1 Intended use	15
4.6.2 Type of use	16
4.6.3 Field of application	16
4.6.4 Unauthorised use	16
4.7 General product information	16
4.8 Device labelling	17
4.9 Installation of spare and wear parts	17
4.10 Storage of the product	17
4.11 Warranty	18
4.12 Disclaimer	18
4.13 Obligation of the operator	19
4.14 Personnel requirements	19

Chapter 5 Storage, delivery and transport	21
5.1 Inspection of incoming deliveries	21
5.2 Storage	21
5.3 Transport	21
Chapter 6 Installation	23
6.1 Dimensions	23
6.2 Installing the M040-1Z000200400	23
6.2.1 Installing directly in a water pipe	24
6.2.2 Installation on a piping system fitting	25
Chapter 7 Maintenance	27
7.1 General maintenance	27
7.2 Replacing the battery	27
7.3 Services	27
Chapter 8 Repair & return	29
Chapter 9 Removal & disposal	31
Chapter 10 Contact information	33

Chapter 2 Declaration of conformity

EU-Konformitätserklärung EU Declaration of Conformity / Déclaration de conformité UE

Type: M040-1Z000200400
Type code :
Type:



Hersteller: Microtronics Engineering GmbH
Manufacturer : Hauptstrasse 7
Fabricant: A-3244 Ruprechtshofen

Das bezeichnete Produkt stimmt mit den folgenden Europäischen Richtlinien überein. The designated product is in conformity with the following european directives. Le produit décrit est conforme aux directives européennes suivantes.			
		Europäische Norm	
(2014/30/EU)	EMC Directive		
		EN61326-1	
(2014/35/EU)	LVD Directive		
		EN61010-1	
(2014/53/EU)	RED Directive		
	Safety & Health 3.1a	EN62368-1+A11:2017	
	EMC 3.1b	EN301489-1 V2.1.1 EN301489-17 V3.2.4	
	Radio spectrum efficiency 3.2	EN300328 V2.2.2	
(2011/65/EU including (EU) 2015/863)	RoHS Directive		
	Prevention 4.1	EN IEC 63000	

Klaus Polzmader

Klaus Polzmader, Director Product
Unterschrift
name and signature of authorised person
Nom et signature de la personne autorisée

Stefan Pfeffer

Stefan Pfeffer, Managing Director Finance
Unterschrift
name and signature of authorised person
Nom et signature de la personne autorisée

Martin Mayer

Martin Mayer, General Managing Director
Unterschrift
name and signature of authorised person
Nom et signature de la personne autorisée

Ruprechtshofen, den 08.07.2026
Ort und Datum der Ausstellung
Place and date of issue
Lieu et date d'établissement

Chapter 3 Specifications

Voltage supply	Battery: Li-SOCl ₂ cell with 19 Ah	
Housing	Material:	Stainless steel / PE-HD
	Weight:	315 g
	Protection class:	IP66 / IP67 / IP68
		IP68: 1 day at an immersion depth of 1 m
	Dimensions (DL):	57 x 120 mm
Operating temperature	-10...+60 °C	
Air humidity	15...90 % RH non-condensing	
Max. operating altitude	≤ 2000 m	
Pollution degree	PD2	
Storage and transport temperature	-20...+70 °C	
Pressure sensor	Measurement range:	0...30 bar
	Resolution:	1 mbar
	Measurement method:	Piezoresistive pressure sensor
	Min. measurement interval:	10 sec.
Temperature sensor	Measurement range:	-10...+60 °C
	Resolution:	0,1 °C
	Min. measurement interval:	10 sec.
Data type	Pressure [mbar]:	s32 (32Bit signed)
	Temperature of medium [0,1°C]:	s16 (16Bit signed)
	Max. pressure during pressure surge [mbar]:	s32 (32Bit signed)
	Min. pressure during pressure surge [mbar]:	s32 (32Bit signed)
	Battery voltage [mV]:	u16 (16Bit unsigned)
	Estimated remaining runtime [h]:	u (32Bit unsigned)
	Status flags []:	u16 (16Bit unsigned)
Data transmission	Local radio connection:	
	Range:	up to 8 m (depending on ambient and structural conditions)
Process connection	G 1/4 male in accordance with DIN EN ISO 1179-2	
Tightening torque	6 Nm	
Device operating time	Up to 6 years (depending on the measurement cycle)	

Chapter 4 General specifications

The information in this manual has been compiled with great care and to the best of our knowledge. The manufacturer, however, assumes no liability for any incorrect specifications that may be provided in this manual. The manufacturer is not responsible for direct, indirect, accidental or consequential damages which arise from errors or omissions in this manual even if advised of the possibility of such damages. In the interest of continuous product development, the manufacturer reserves the right to make improvements to this manual and the products described in it at any time and without prior notification or obligation.

Tip: The specifications in this manual are valid as of the versions listed on the front page. Revised versions of this manual are available via the manufacturer's website (see "Contact information" on page 33).

4.1 Translation

For deliveries to countries in the European Economic Area, the manual must be translated into the language of the respective country. If there are any discrepancies in the translated text, the original manual (German) must be referenced or the manufacturer contacted for clarification.

4.2 Copyright

The copying and distribution of this document as well as the utilisation and communication of its contents to others without express authorisation is prohibited. Contraventions are liable to compensation. All rights reserved.

4.3 General descriptive names

The use of general descriptive names, trade names, trademarks and the like in this manual does not entitle the reader to assume they may be used freely by everyone. They are often protected registered trademarks even if not marked as such.

4.4 Safety instructions

For the connection, commissioning and operation of the M040-1Z000200400, the following information and higher legal regulations of the country (e.g. ÖVE), such as valid EX regulations as well as the applicable safety and accident prevention regulations for the respective application case must be observed.

Read this manual completely before unpacking, setting up or operating this device. Observe all hazard, danger and warning information. Non-observance can lead to serious injuries to the operator and/or damage to the device.

Ensure that the safety equipment of this measurement instrument is not impaired. Install and use the measurement system only in the manner and method described in this manual. Do not make any changes to the measurement system under any circumstances.

Important: *The manufacturer's products that are designed for outdoor use include extensive protection against moisture and dust penetration.*

4.4.1 Use of the hazard warnings



Danger: *Indicates a potential or threatening hazardous situation that will result in death or serious injuries if not avoided.*



Attention: *Indicates a potential or threatening hazardous situation that can result in death or serious injuries if not avoided.*



Caution: *Indicates a potential hazardous situation that can result in minor or moderate injuries or damage to this instrument.*

Important: *Indicates a situation that can result in damages to this instrument if it is not avoided. Information that must be particularly emphasised.*

Note: *Indicates a situation that does not result in any injury to persons.*

Tip: *Information that supplements the specifications in the main text.*

4.4.2 Safety symbols on the device

	Devices marked with this symbol must be disposed of in accordance with the requirements of Directive 2012/19/EU on waste electrical and electronic equipment.
	This symbol on a device indicates the location of the earth connection.
	This symbol on a device indicates the location of a fuse or current limiting circuit.

4.4.3 General safety instructions

- This manual is intended to be used by qualified personnel (see "Personnel requirements" on page 19). Read this manual thoroughly before unpacking, setting up or operating the device..
- If you encounter difficulties in understanding the information contained in this manual (or parts thereof), please contact the manufacturer or authorised distributors (see "Contact information" on page 33).
- Keep this manual on hand so that you can refer to it whenever you need information.
- Before installation or commissioning, ensure that the device is in good condition. For this purpose, check for visible defects on all important components. Pay particular attention to fastenings, connections, cable connections, seals, moving parts (e.g. hinges or joints), battery packs, power supply units, etc., if present.
- If defects are found that jeopardise operational safety, all further work must be stopped immediately. This applies regardless of whether the defects are found before installation or commissioning, or during installation, commissioning or ongoing operation.
- Do not attempt to repair the device yourself, either mechanically or electrically. In the event of damage, return the device to the manufacturer in its original packaging (see "Repair & return" on page 29).
- The device must not be disposed of with household waste under any circumstances. Information on correct disposal can be found in the chapter "Removal & disposal" on page 31.

4.4.4 Specific safety instructions



Attention: *Never use this device in areas where the use of wireless equipment is prohibited. The device must not be used in hospitals and/or in the vicinity of medical equipment, such as heart pacemakers or hearing aids, as their functionality could be compromised by the wireless module contained in the device.*



Attention: *Never use this device in potentially explosive atmospheres and in the vicinity of highly combustible areas (fuel stations, storage areas for combustible material, chemical plants and detonation sites) or in the vicinity of flammable gases, vapours or dust.*

4.4.5 Safety and preventative measures for handling devices with wireless modules

The following safety and preventative measures must be observed during all phases of installation, operation, maintenance or repair of a wireless module. The manufacturer is not liable if the customer disregards these preventative measures.



Caution: *The wireless connection must not be used in hazardous environments.*


No guarantee of any kind, whether implicit or explicit, is given by the manufacturer and its suppliers for the use with high risk activities.

In addition to the following safety considerations, all directives of the country in which the device is installed must be complied with.

4.4.5.1 Safety and precautionary measures for devices with wireless module

- The device must not be operated in hospitals and/or in the vicinity of medical equipment such as heart pacemakers or hearing aids.
- The device must not be operated in highly flammable areas such as petrol filling stations, fuel storage sites, chemical factories and explosion sites.
- The device must not be operated in the vicinity of flammable gases, vapours or dusts.
- The device must not be subjected to strong vibrations or impacts.
- The wireless module can cause interferences if it is located in the vicinity of television sets, radios or computers.
- Do not open the wireless module. Any modification to the device is prohibited and will result in the operating licence being revoked.
- Do not install the device in any other way to the one described in the operating instructions. Improper use will invalidate the warranty.

4.5 Overview

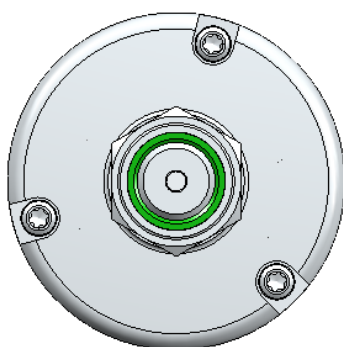


Top of the M040-1Z000200400



Front of the M040-1Z000200400

1 Process connection (G 1/4 male)	2 Hexagon nut for tightening
---	-------------------------------------

4.5.1 Block diagram

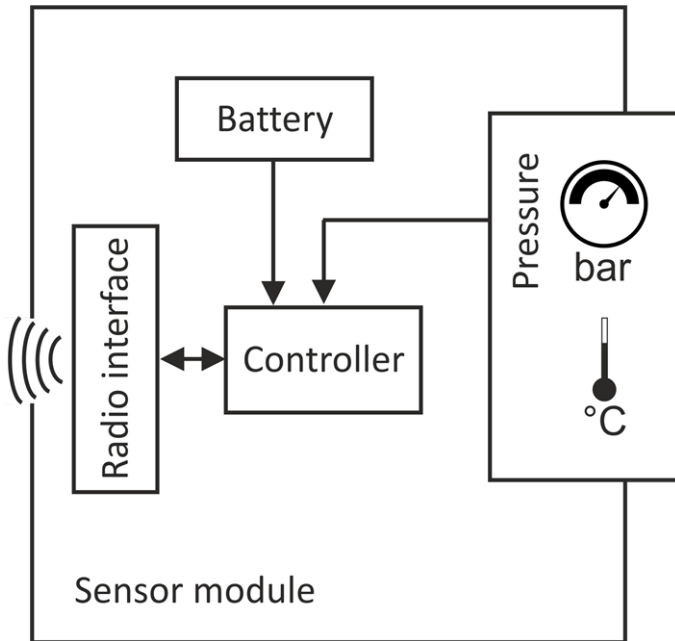

Block diagram of the M040-1Z000200400

4.6 Limitations of use

The following chapters describe the limits within which use of the device is permitted. Reasonably foreseeable misuse is also listed and the use of the device in this way is explicitly excluded.

Note: Any use of the device that is not specified in chapters "Intended use" on page 15, "Type of use" on page 16 and "Field of application" on page 16 is not permitted. This also applies if the device is used in a way that is not explicitly excluded as unauthorised in the chapter "Unauthorised use" on page 16. The manufacturer is not liable for any damage or consequential damage resulting from unauthorised use. The risk is borne solely by the operator.

4.6.1 Intended use

The battery-operated, stationary sensor is used for recording pressure levels and water temperature in water supply networks where drinking water certification of the sensor is not mandatory. The device operates without mains power. Current measurement values can be read out via a local radio connection and can be recorded using a compatible data logger. The device is intended exclusively for operation within the limits specified in chapter "Specifications" on page 9.

Note: This device is exclusively intended to be used for the purposes as described before. Any other use or use beyond what is specified or a modification of the device shall be deemed to be not for the intended purpose and is not permitted without the express written consent of the manufacturer. The manufacturer shall not be held liable for any damages that may result from such unauthorised use or modification. The operator alone bears the associated risk.

Note: The manufacturer is not liable for data loss of any kind.

4.6.2 Type of use

Installation, commissioning and maintenance may only be completed by qualified personnel (see "Personnel requirements" on page 19). The device is only approved for use in shafts without an explosive atmosphere.

4.6.3 Field of application

It is only authorised for use in the industrial sector, business/commercial sector or in small businesses.

4.6.4 Unauthorised use

Note: The following describes the types of use of the device that are not permitted. This is not a complete list, but rather a list of reasonably foreseeable misuse. Only the use specified in chapters "Intended use" on page 15, "Type of use" on page 16 and "Field of application" on page 16 is permitted. The manufacturer is not liable for any damage or consequential damage resulting from unauthorised use. The risk is borne solely by the operator.

- The device must not be exposed to direct sunlight or direct weather influences (rain, snow, ...).
- The device must not be installed in locations that are permanently flooded.
- The unit must not be fitted upside down or at an angle to the side. The process connection must always point upwards.
- The device must only be tightened using the hexagon socket on the process connection. A suitable open-ended spanner must be used for this purpose. The device must not be tightened by gripping the housing.
- The device must not be used in water supply networks where the sensor is required to be certified for drinking water.

4.7 General product information

The device is a battery-operated, stationary measurement device for recording pressure levels and water temperature in water supply networks where drinking water certification of the sensor is not mandatory. The water pressure is measured using a piezoresistive absolute pressure sensor. Temperature-related factors affecting pressure measurement are automatically compensated for. The M040-1Z000200400 can be screwed directly into the water pipe via the standardised G 1/4 male process connection. For the supply of the integrated logic (radio module, controller and sensor), the M040-1Z000200400 is equipped with an internal battery. The capacity of the built-in battery is designed for a maximum service life of 6 years. Since the communication between M040-1Z000200400 and a compatible data logger is carried out via local radio connection, no on-site cabling is required. The compact design also allows installation in areas with limited space. Pressure, the temperature of the medium (water temperature) and battery voltage are recorded every 10 sec. and can be read via a local radio connection and recorded using a data logger. A data logger can also be paired with the M040-1Z000200400. In this case, the data logger must trigger the measurement process. Measurement values generated in this way can then be read out and recorded using a data logger. The "estimated remaining runtime" is updated every 60 minutes, regardless of whether the connection is active or inactive..

4.8 Device labelling

The specifications in this user manual apply exclusively to the M040-1Z000200400 device type. The type plates are located on the bottom and on the sides of the device and contain the following specifications:

- Name and address of the manufacturer
- CE marking
- Environmental conditions during operation
- Protection class
- Logo for the EU WEEE Directive
- Product name
- Type key
- Item number
- Product revision
- Serial number
- Week and year of production

Microtronics Engineering GmbH
Hauptstrasse 7 | 3244 Ruprechtshofen | Austria



-10°C...+60°C
15...90% r.H. IP68



Type plates M040-1Z000200400

The correct specification of the type designation and serial number is important for all queries and spare part orders. Only then can we process requests promptly and properly.

Note: These operating instructions are part of the device and must be available to the user at all times. The safety instructions contained therein must be observed.



Attention: It is strictly prohibited to disable the safety equipment or modify its mode of operation.

4.9 Installation of spare and wear parts

Be advised that spare and accessory parts that have not been supplied by the manufacturer have also not been inspected or approved by the manufacturer. The installation and/or use of such products can possibly have a negative impact on the specified constructional properties of the device. The manufacturer shall not be liable for any damages that arise from the use of non-original parts and non-original accessory parts.

4.10 Storage of the product

The M040-1Z000200400 does not include a special transport mode. The capacity of the installed battery is designed for a max. service life of 6 . In the event of unfavourable environmental conditions (e.g. low

temperatures), it may occur that the battery capacity is depleted before this period of time has elapsed. Store the M040-1Z000200400 in its original packaging.

4.11 Warranty

The device has been functionally tested before delivery. If it is used as intended (see "Intended use" on page 15) and the operating instructions, the applicable documents and the safety notes and instructions contained therein, are observed, no functional restrictions are to be expected and perfect operation should be possible.

Tip: Please also note in this regard the next chapter "Disclaimer" on page 18.

Note: Limitation of warranty

In the event of non-compliance with the safety instructions and instructions in this document, the manufacturer reserves the right to limit the warranty.

4.12 Disclaimer

The manufacturer assumes no liability

- for damages owing to **a change** of this document. The manufacturer reserves the right to change the contents of this document and this disclaimer at any time and without any notice.
- for damages to persons or objects resulting from **failure to comply** with applicable **regulations**. For connection, commissioning and operation of the devices/sensors all available information and higher local legal regulations (e.g. in Austria ÖVE guidelines) such as applicable Ex regulations as well as safety requirements and regulations in order to avoid accidents shall be adhered to.
- for damages to persons or objects resulting from **improper use**. For safety and warranty reasons, all internal work on the instruments beyond from that involved in normal installation and connection, must be carried out only by qualified Microtronics personnel or persons or companies authorised by Microtronics .
- for damages to persons or objects resulting from the use of instruments in technically **imperfect** condition.
- for damages to persons or objects resulting from the use of instruments **not in accordance with the requirements**.
- for damages to persons or objects resulting from **failure to comply** with **safety information** contained within this instruction manual.
- for missing or incorrect measurement values or resulting consequential damages due to **improper installation** or **incorrect parameterisation/programming**.

4.13 Obligation of the operator



Attention: *In the EEA (European Economic Area), the national implementation of the framework directive (89/391/EEC) as well as the associated specific directives and from these in particular, the directive (2009/104/EC) about the minimum safety and health requirements for use of work equipment by workers at work, each in their respective version are to be complied with.*

The operator must obtain the local operating licence and the associated documents.

In addition, the operator must comply with the local legal requirements for

- the safety of the personnel (accident prevention measures),
- the safety of the equipment (protective equipment and maintenance),
- the product disposal (waste disposal law),
- the material disposal (waste disposal law),
- the cleaning (cleaning agents and disposal) and
- the environmental protection amendments.

Before commissioning, the operator must ensure that the installation and commissioning – provided these were performed by the operator himself – are in compliance with the local regulations.

4.14 Personnel requirements

Installation, commissioning and maintenance may only be completed by personnel who meet the following conditions:

- Qualified specialist personnel with the relevant training
- Authorised by the facility operator

Tip: Qualified personnel

In the context of these instructions and the warnings on the product itself, individuals responsible for the setup, installation, commissioning and operation of the product must have gained relevant qualifications relating to their activities, including, for example:

- *Training, instruction and authorisation to activate/deactivate, ground and label electric circuits and devices/systems in accordance with the standards of safety engineering.*
- *Training or instruction on the maintenance and use of suitable safety equipment in accordance with the standards of safety engineering.*
- *First aid training*

Chapter 5 Storage, delivery and transport

5.1 Inspection of incoming deliveries

Check the shipment immediately upon receipt to ensure it is complete and intact. Immediately report any discovered transport damages to the delivering carrier. Also notify Microtronics Engineering GmbH in writing about this without delay. Report any incompleteness of the delivery to the responsible representative or directly to the company headquarters of the manufacturer within two weeks (see "Contact information" on page 33).

Note: Any claims received thereafter will not be accepted.

5.2 Storage

The following storage conditions must be adhered to:

M040-1Z000200400	Storage temperature	-20...+70 °C
	Humidity	15...90 % RH

Note: The battery remains in the M040-1Z000200400 during storage.

Store the device so that it is protected against corrosive or organic solvent vapours, radioactive emissions as well as strong electromagnetic radiation.


5.3 Transport

Protect the M040-1Z000200400 against heavy shocks, bumps, impacts or vibrations. The original packaging must always be used for transport.

Chapter 6 Installation

Important: To prevent any damage to the device, the work described in this section of the instructions must only be performed by qualified personnel.

6.1 Dimensions

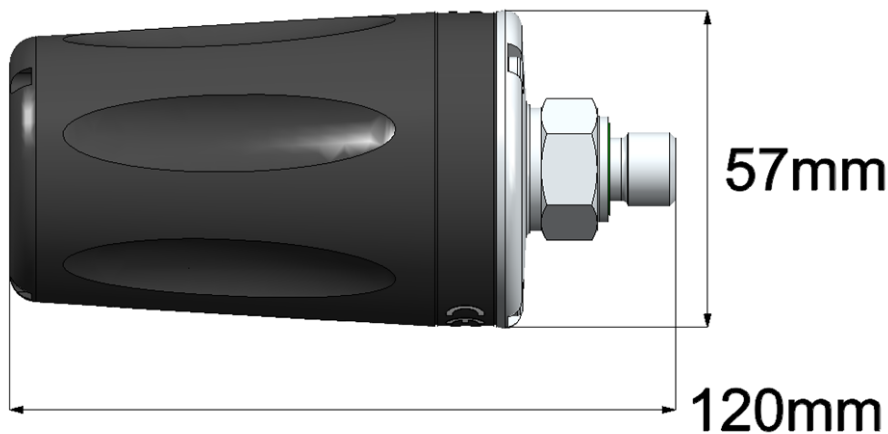

Dimensions: Length and diameter

6.2 Installing the M040-1Z000200400

Important:

- Ensure installation is completed correctly.
- Comply with existing legal and/or operational directives.
- Improper handling can cause injuries and/or damage to the devices.
- The M040-1Z000200400 is not approved for use in sewers.
- The M040-1Z000200400 is not suitable for outdoor use.


Note: It is recommended that all metal mounting fixtures be properly earthed.

The installation site must be selected according to specific criteria. The following conditions must be avoided in any case:

- Direct sunlight
- Direct weather exposure (rain, snow, etc.)
- Objects that radiate intense heat (maximum ambient temperature: -10...+60 °C)
- Objects with a strong electromagnetic field (frequency converter or similar)
- Corrosive chemicals or gases
- Mechanical impacts
- Direct installation on paths or roads
- Vibrations
- Radioactive emissions

6.2.1 Installing directly in a water pipe

Note: The M040-1Z000200400 must be fitted with the process connection pointing upwards. This allows any air enclosed during installation to escape upwards.

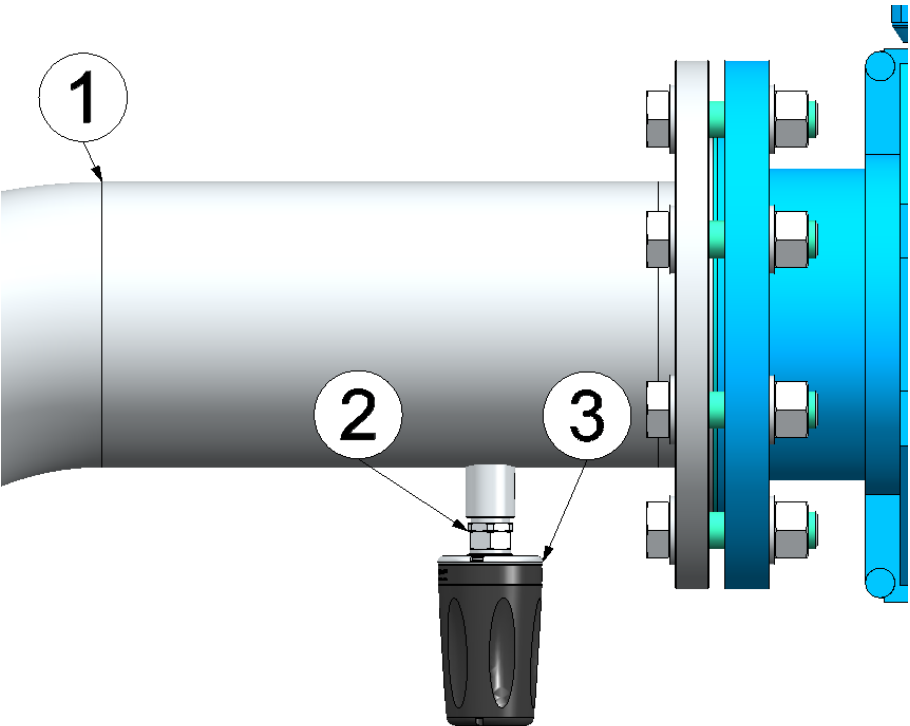


Install directly in the water pipe

1 Water pipe	3 M040-1Z000200400
2 Process adapter ¹⁾	

¹⁾ The M040-1Z000200400 is designed with a G 1/4 male process connection in accordance with DIN EN ISO 1179-2 . The process adapter must be designed with a corresponding G 1/4 female connection in accordance with DIN EN ISO 1179-2 .

6.2.2 Installation on a piping system fitting

Note: To ensure accurate measurement, the connecting pipe to the M040-1Z000200400 must be vented via the shut-off valve after installation.

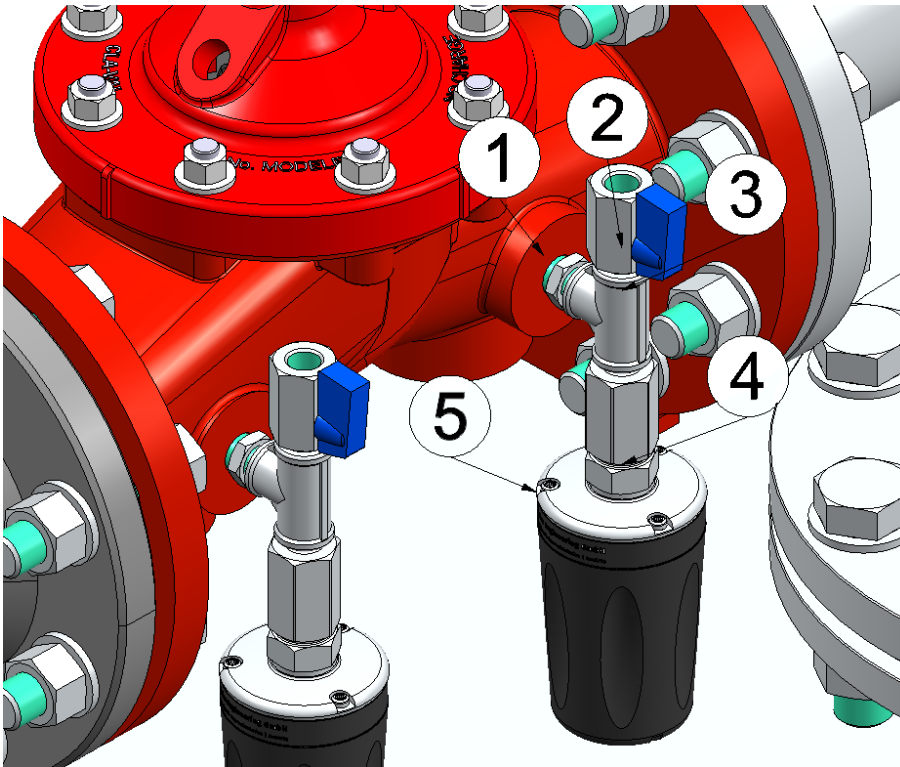

Installation on a piping system fitting

1 Measuring connection on the pipe fitting	4 Process adapter ¹⁾
2 Shut-off valve (for venting)	5 M040-1Z000200400
3 Tee fitting	

¹⁾ The M040-1Z000200400 is designed with a G 1/4 male process connection in accordance with DIN EN ISO 1179-2 . The process adapter must be designed with a corresponding G 1/4 female connection in accordance with DIN EN ISO 1179-2 .

Chapter 7 Maintenance

Important: To prevent any damage to the device, the work described in this section of the instructions must only be performed by qualified personnel.

The device must be deenergised before any maintenance, cleaning and/or repair work.

7.1 General maintenance

- Regularly check the M040-1Z000200400 for mechanical damage.
- Clean the M040-1Z000200400 with a soft, moist cloth. Use a mild cleaning agent, if necessary.

7.2 Replacing the battery

The capacity of the installed battery is designed for a max. service life of 6 years. In the event of unfavourable environmental conditions (e.g. low temperatures), it may occur that the battery capacity is depleted before this period of time has elapsed. To replace the battery, the M040-1Z000200400 must be sent back to the manufacturer in the original packaging (see "Repair & return" on page 29).

7.3 Services

Microtronics Engineering GmbH offers the following maintenance services for the M040-1Z000200400 :

Description	Order number
Inspection fee	206.395
Cleaning flat	206.355
Software Update	206.555

Chapter 8 Repair & return

Microtronics products are manufactured using quality-assured processes. The Microtronics Engineering GmbH production site is ISO 90001 certified. All products are tested and/or calibrated before being shipped to the customer. This ensures that Microtronics Engineering GmbH products perform to their full capacity upon delivery.

Despite Microtronics Engineering GmbH's most rigorous quality assurance measures, malfunctions may occur as well within as outside the warranty period. In some cases, however, it is not necessary to return the product. Some issues can be resolved remotely by the Support & Service Centre (e.g. via OTA firmware update). If your device shows unexpected behaviour or malfunctions, please proceed as follows:

1. Contact the support & service center (support.microtronics.com)

In the Microtronics Help Center, select the category "Technical support (device)" to create a ticket. Please describe the problem in as much detail as possible to help our staff diagnose the issue. One of our staff members will then contact you and attempt to resolve the problem remotely with you.

2. Wait for the completed RMA form you will receive in response

If it was not possible to resolve the problem remotely, you will receive a completed RMA form that you must enclose with the return shipment. At the bottom of the form, you will also find more detailed information on how to return the product.

3. Return the M040-1Z000200400

Do not dispatch the device until you have received the RMA form and the RMA number noted on it. Microtronics will not reject shipments that arrive without a clearly indicated RMA number or without the enclosed RMA form. However, processing will take significantly longer in such cases.

If you return the M040-1Z000200400 for repair under warranty or outside of warranty, check with your national customs/tax authorities for applicable regulations, procedures and necessary documentation for tax-free return of products. Special customs tariff numbers are usually available to confirm that the item is being returned for repair and has no commercial value.

The customs invoice/shipping documents should clearly state: "Goods being returned to manufacturer for repair – No commercial value". It is mandatory that any returned goods are accompanied by a commercial invoice on headed paper. Microtronics reserves the right to charge the customer for time spent rectifying incorrect customs documents.

Note: *Ensure that the M040-1Z000200400 is packed carefully and securely. Damage incurred during transport is not covered by the warranty and may be subject to a charge.*

Chapter 9 Removal & disposal

Material separation only by qualified personnel!

- Be careful when disassembling the device, you may injure yourself.
- Take the separated components to the appropriate recycling.

Incorrect disposal can cause environmental hazards.

Dispose of the device components and packaging material in accordance with the locally valid environmental regulations for electronic products (e.g. according to European waste code 16 02 14).



Logo of the EU WEEE Directive

This symbol indicates that the requirements of Directive 2012/19/EU regarding the scrap disposal of waste from electric and electronic equipment must be observed. Microtronics Engineering GmbH supports and promotes recycling and environmentally friendly, separate collection/disposal of waste from electric and electronic equipment in order to protect the environment and human health. Observe the local laws and regulations on disposal of electronic waste at all times.

Microtronics Engineering GmbH releases goods brought onto the market in Austria from the obligations via ERA, which means that collection points that cooperate with ERA Elektro Recycling Austria GmbH (<https://www.era-gmbh.at/>) can be used for disposal in Austria.

The device includes a battery or rechargeable battery (lithium) that must be disposed of separately.

The product can be returned to Microtronics Engineering GmbH in case of disposal (see "Contact information" on page 33). This also applies to the original packaging and any batteries or rechargeable batteries. Devices contaminated with hazardous substances will not be taken back for repair or disposal.

Chapter 10 Contact information

Support & Service:

Microtronics Engineering GmbH
Hauptstrasse 7
3244 Ruprechtshofen
Austria, Europe
Tel. +43 (0)2756 7718023
support@microtronics.com
www.microtronics.com

Microtronics Engineering GmbH (Headquarters)

Hauptstrasse 7
3244 Ruprechtshofen
Austria, Europe
Tel. +43 (0)2756 77180
Fax. +43 (0)2756 7718033
office@microtronics.com
www.microtronics.com



Certified by TÜV AUSTRIA: EN ISO 9001:2015, EN ISO 14001:2015, ISO/IEC 27001:2013, EN ISO 50001:2011 for myDatenet | TÜV SÜD: ATEX Directive 2014/34/EU

© Microtronics Engineering GmbH. All rights reserved. Photos: Microtronics, shutterstock.com